

# USER MANUAL

\* Please plug the keypad/control panel into the wall outlet for at least 8 hours. Make sure the ac adaptor for the keypad/control panel is securely plugged into the keypad/control panel.

\* Another thing to keep in mind to plug in the MAIN KEYPAD INTO ONE SINGLE WALL OUTLET, DO NOT SHARE it with other electronic devices.

## **STEP 1**

### Preparation of Sensors for Installation

- **Motion Detectors.**

- A. turn ON/OFF switch to OFF position
- B. open motion detector and install battery
- C. maintain ON/OFF switch in OFF position

- **Window/Door Sensor.**

- A. separate sensor from magnetic bar
- B. opens the sensor and installs battery
- C. keeps sensor and bar separate

- **Smoking Detector.**

Install battery

- **Gas Detector and Glass Break Detector.**

Plug power cord into wall outlet.

- **Wireless Portable Keypad.**

Open back cover. Install battery.

- **Attach Wired Siren**

Insert plug of your alarm siren into siren jack on keypad/dialer

- **Attaching telephone to keypad/controller.**

- A. Insert your telephone line into the “LINE” jack of the keypad/dialer.
- B. Insert the line from your telephone into the “TEL” jack of the keypad/dialer.

Notice: A phone line inserted into the wrong dialer phone jack may prevent the accessibility of the keypad/dialer from a remote location by telephone.

- **Powering up**

This keypad/controller has a security enhancing design which locates the power receptacle and on/off switch in the interior opening on the back of the keypad/dialer unit

Turn your keypad so that you are facing the back of the unit. You will see an open rectangular slot. Inside this slot, on the right are the power cord receptacle and the on/off switch

A. Plug the power cord into power receptacle and then into your wall outlet.

B. Turn keypad/controller powers switch "**ON**".



Power switch is located back of Keypad. In open slot.  
Power receptacle is located back of Keypad. In open slot.

- **Activating Wireless Outdoor Siren.**

A. Turn keypad/controller power switch on. Depress the keypad "**PANIC**" button.

B. Plug power cord of wireless outdoor siren into power receptacle and then into your wall outlet. **Repeat this action until you hear "short sound"**, and then you will hear "**long sound**" that indicating it has been activated. Turn keypad power switch off.

- **Activating Wireless Luxury out/in door Siren w/strobe.**

B. Turn keypad/controller power switch on. Depress the keypad "**PANIC**" button.

B. Plug power cord of wireless luxury out/in door siren w/strobe into power receptacle and then into your wall outlet. **Repeat this action until you hear "short sound"**, and then you will hear "**long sound**" that indicating it has been activated. Turn keypad power switch off.

- **Activating Wireless Siren /w Strobe.**

Plug siren. Depress and hold black button on side of cover which will produce pulsating light in red LED case. Hold button until light is steady on. Turn keypad power switch on. Depress and hold black siren button again. Pulsating light in red LED reappears. Depress the keypad PANIC button. Pulsating siren light will steady and go off (release black button).four red lights will come on. Registration complete. Turn keypad power switch off.

# STEP 2

Each component of the alarm system has to be activated to become functional; all activation takes place when the system is in **Programming status**. When you have completed programming the system's functions, push the button "**Exit**" on the keypad; after 30 second system will automatically exit **Programming status**

1. To place system into **Programming Status**, enter the factory password numbers 1, 2, 3, 4 and push the button Pro (you can substitute your own password for factory password see section "1"). You are now in **programming status** and in position to program any of the changes listed below.

password      program

Factory  
password  
1234

./

## 2. Changing the Password.

Push the symbols and number sequence below, substituting your own four number codes in place of the question mark symbol.

1    0    \*    ?    #

Enter your new  
4 digit  
password.

## 3. Activating Your Keychain Remote /Panic button.

With your system in **Programming Status**, enter the number and symbols sequence below. In place of the question mark (?),

A. Push any of the four buttons on your keychain remote. You will hear two beeping sounds indicating that your keychain remote is now activated.

**B.** Push buttons on your panic button. You will hear two beeping sounds indicating that your panic button is now activated.

7 0 \* 0 0 # ?

- A. Push any button on keychain.
- B. Push button on panic button.

#### 4. Deactivating Your Keychain Remote and Panic button, Wireless Portable Keypad.

Deactivate while in “**programming status**” by entering the number and symbol sequence below which will deactivate all keychain remotes and panic button, Wireless keypad.

7 0 \* #

## Activating the detectors

Our system supports 32 defense zones. This system is unique in letting you know exactly which zone is setting off the alarm. Each individual sensor (Motion detector, window/door sensor, smoking/gas detector, glass break detector) has to be individually activated while unit is in “**programming status**”. Each sensor is programmed to have its own numerical identity. Same type of sensors/detectors can share the same numerical number. To perform this, you first assign a two digit numbers to each sensor. Window/door sensors may be assigned any number between 09 and 32(notice: must 2 digits); motion detectors, smoke & gas detectors any number between 01 and 08(notice: must 2 digits). These are zone numbers. When a sensor is triggered the assigned zone number will light up on the LED screen of the keypad. It may be helpful for you to keep a list of the areas corresponding to the assigned zones.

#### 5. Activating Door/Window Sensors. Each sensor needs to be numbered

For each door/window sensor, choose a number from **09 to 32 (notice: must 2 digits)**, with your system in **programming status**, enter the number and symbol sequence below into your keypad/controller. In the place of first question mark (?), enter the number you have chosen for the sensor. The second question mark (?) comes after the pound sign (#). In place of the question mark you will need to physically trigger the door/window sensor to activate it by bring the magnetic bar and the sensor together and then separating them. Activation will be confirmed by a **double beeping** sound. Each door/window sensor has to be individually activated using this procedure.

7 1 \* ? 1 # ?

Enter the number for selected this sensor from 09-32, (must 2 digits)

Trigger Door/window sensor (Separate sensor from magnetic bar)

## 6. Activating Wireless Range Bean Motion Detectors. Each sensor needs to be numbered

### Activating Wireless Bean Motion Detectors. Each sensor needs to be numbered

For each wireless range bean motion detector/bean motion detector, choose a number from **09 to 32** (notice: **must 2 digits**), with your system in programming status, enter the number and symbol sequence below into your keypad/controller. In the place of first question mark (?), enter the number you have chosen for the sensor. The second question mark (?) comes after the pound sign (#). In place of the question mark you will need to physically trigger the wireless range bean motion detector/bean motion detector to activate it by Plug in power supply of wireless range bean motion detector receiver. Activation will be confirmed by a **double beeping** sound. Each wireless range bean motion detector/bean motion detector has to be individually activated using this procedure

The diagram shows a sequence of keypad buttons: 7, 1, \*, ?, 1, #, ?. Two callout boxes provide instructions for the question marks. The first callout points to the first question mark and says: "Enter the number for selected this sensor from 09-32, (must 2 digits)". The second callout points to the second question mark and says: "Trigger wireless range bean motion detector/bean motion detector." followed by "Plug in power supply of wireless range bean motion detector receiver" in red text.

## 7. Activating the Motion Detector.

For each motion detector you use choose a number from **01 to 08** (notice: **must 2 digits**), with your system in programming status, enter the number and symbol sequence below into the keypad/controller. In place of first question mark enter the number you have chosen for the sensor. In place of the second question mark after the pound sign (#), you will need to physically trigger the motion detector to activate it. On the motion detector, switch the ON/OFF switch to the on position. Secondly, physically move the motion detector about in front of an object as the motion detector warms up; you will hear a **double beep** sound indicating that it has been activated. Each motion detector has to be individually activated using this procedure.

The diagram shows a sequence of keypad buttons: 7, 1, \*, ?, 3, #, ?. Two callout boxes provide instructions for the question marks. The first callout points to the first question mark and says: "Enter the number for selected this sensor from 01-08 (must 2 digits)". The second callout points to the second question mark and says: "Trigger Motion detector".

## 8. Activating the Smoke Detector/Gas Detector/Glass Break Detector.


For each smoke detector/gas detector/glass break detector you use, choose a number from **01 to 08** (notice: **must 2 digits**). With your system in **programming status**, on your keypad enter the number and symbol sequence below. In the place of first question mark (?), enter the number you have chosen for the sensor. After entering the pound sign (#), you will need to physically trigger the smoking/gas detector/glass break detector to activate them.

A. To trigger the smoke detector, depress the clear plastic button on the face of the smoking detector. You will hear a **double beep** sound to indicate that it has been activated.

B. To trigger the gas detector, depress the white plastic button on the face of the gas detector. You will hear a **double beep** sound to indicate that it has been activated.

C. To trigger the glass break detector, knock your glass window with any metal. Until you hear a **double beep** sound from your wireless keypad controller to indicate that it has been activated.

Each smoke/ gas detector/glass break detector has to be individually activated using this procedure.

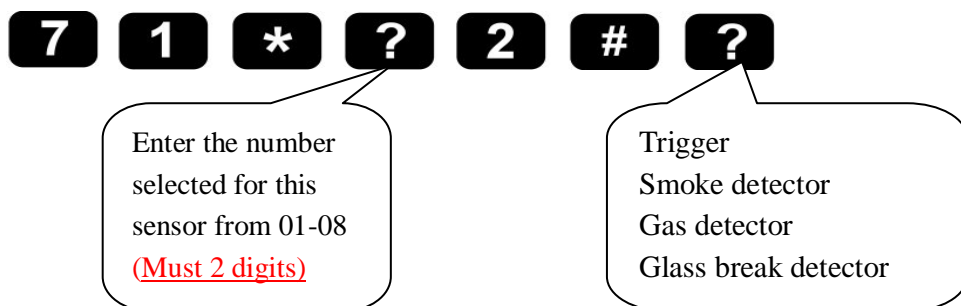

## 9. Deactivating All Sensors (door/window sensor, motion detector, smoke Detector, Gas Detector, Glass Break Detector)

Deactivating one sensor automatically deactivates all of your sensors. To deactivate, enter the sequence of numbers and symbols below into your keypad:



## 10. Setting the Exit Delay Time/ Arm Delay Model.

This function allows you to activate your system while providing you with time to exit your premises without triggering the alarm system; you can adjust the delay time from zero (**00**) to thirty (**30**) minutes. With your system

in **programming status**, enter the number and symbol sequence below, and where the question mark (?) appears enter the delay time you wish (up to 30 minutes). **The default factory setting for delay time is one minute.**

**2 7 \* ? #**

Enter minutes in two digits.  
00 means no delay  
01 means 1 minute delay  
30 means 30 minute delay

## 11. Setting the Entrance Delay Time/ Disarm Delay Model.

This function allows you time to enter your premises when your alarm system is armed without triggering the alarm system. The entrance delay time can be set from zero (**00**) to thirty (**30**) minutes. With your system in **programming status**, enter the number and symbol sequence below into your keypad. In place of the question mark (?), enter the delay time (up to 30 minutes). **The default factory setting for delay time is zero minute.**

**2 8 \* ? #**

Enter minutes in two digits.  
00 means no delay  
01 means 1 minutes delay  
30 means 30 minutes delay

## 12. Setting Siren Sounding Time/ Silent Alarm Model.

This function allows you to set the length of time your siren will sound; you have a range from **silent alarm (00)** up to thirty (**30**) minutes. **The factory default setting is three (03) minutes.** With your system in **programming status**, enter the number and symbol sequence below into your keypad. In place of the question mark (?), enter the length of siren sounding time from zero (**00**) to thirty (**30**) minutes.

**2 9 \* ? #**

Enter minutes in two digits.  
00 means silent alarm  
01 means 1 minutes sound  
30 means 30 minutes sounds

### 13. Programming Stored Phone Numbers.

To program your dialer with the phone numbers you want called when the alarm is triggered (up to six numbers), enter the number and symbol sequence below into your keypad. In place of the question mark (?), enter the phone number. If your calling location requires a calling prefix (e.g. New York requires you to dial 1 first), enter the prefix along with your phone number.

If you want to change any stored phone number, re-enter the sequence code for that number and enter the new number; you do not have to delete the old number as the system will automatically replace it with the new number.

Stored first phone number: 3+1+\*+phone number+#

**3** **1** **\*** **?** **#**

Stored second phone number: 3+2+\*+phone number+#

**3** **2** **\*** **?** **#**

Stored third phone number: 3+3+\*+phone number+#

**3** **3** **\*** **?** **#**

Stored fourth phone number: 3+4+\*+phone number+#

**3** **4** **\*** **?** **#**

Stored fifth phone number: 3+5+\*+phone number+#

**3** **5** **\*** **?** **#**

Stored sixth phone number: 3+6+\*+phone number+#

**3** **6** **\*** **?** **#**

“?” means  
enter your  
phone number

### 14. Phone Line Anti-Cut Monitoring.

This system is programmed with an alarm function to alert you when your phone line is cut or disconnected; this function must be turned on to be operational. With your system in **programming status**, enter the number and symbol sequence below into the keypad. In place of the question mark (?) press “**1**” to turn on this function or “**0**” to turn off this function. **The default factory setting is “0” (OFF)**. When this function is activated and the alarm system is “armed”, line interruption is signaled by three siren blasts at ten second intervals, followed by beeping at five second intervals. When the alarm system is “disarmed”, line interruption is signaled by beeping at ten second intervals.

**2** **2** **\*** **?** **#**

“0” means function is off

“1” means function is on

## 15. Anti-Interference Defense.

This function provides a warning (siren alarm) when the alarm system is being interfered with by a device operating on the same frequency. Once turned on, this function becomes active whenever the alarm system is armed. To activate this function (with your system in **programming status**), enter the number and symbol sequence below into your keypad. In the blank space enter the number 1. **The default factory setting is “0” (OFF)**



“0” function OFF  
“1” functions ON

## 16. Protecting Against Disarming Signals from Lost Keychain Remotes

This function prevents anyone from disarm your alarm system with a lost keychain remote. This function protects your premises from penetration with lost or copied keychain remotes. With your system in **programming status**, enter the number and symbol sequence below into your keypad. In the blank space enter the number 1.

**The default factory setting is “0” (OFF)**



“0” function OFF  
“1” function ON

## 17. Record Message.


To record your outgoing message, (while in **“programming status”**), press: **recorder** + # and record your message for a maximum of 10 seconds.



Speak your message  
into the keypad

## 18. Play Back.


To play back recorded message, enter the sequence code below and in place of the question mark (?), pick up the phone receiver to hear the message.

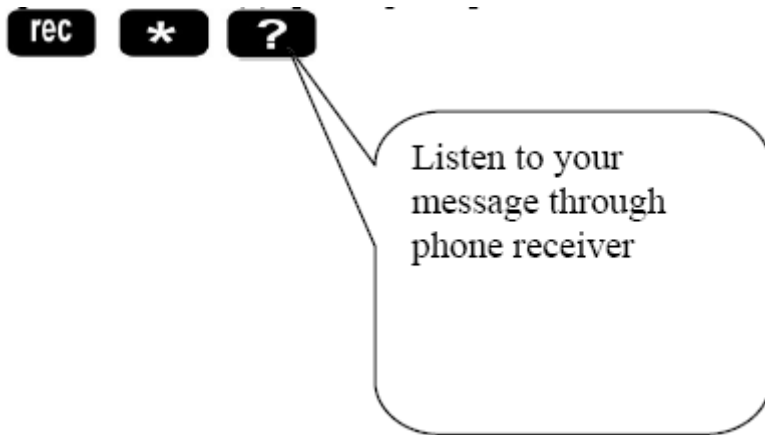

## 19. Remote Access to Keypad/Dialer.

You may change your dialer function settings (arm, disarm, monitor) remotely by phone.

The number of times the phone rings before you are connected with the Dialer System can be preset by entering the code sequence below into your keypad. In place of the question mark (?) enter the number of rings from one (01) to 12 (12). Entering (00) turns off the remote access function. **The default factory setting is “08”.**

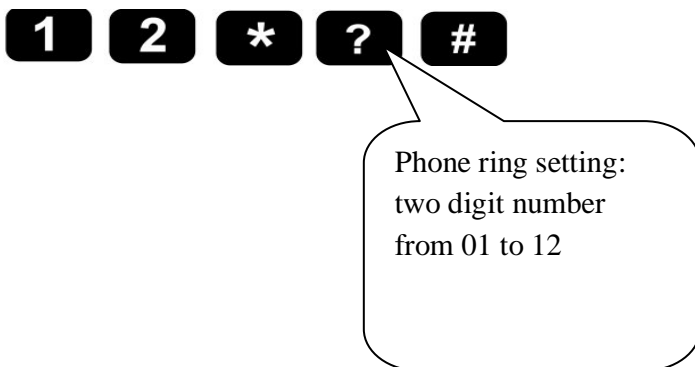


## 20. Professional Monitoring Service Function.

This alarm system has a function which supports the use of professional monitoring service. To activate this function (with your system in **programming status**), enter the number and symbol sequence below into the keypad. In place of the question mark (?), enter the four digit (CONTACT ID) number. To deactivate this function, enter the coded sequence into the keypad and in place of the question mark (?), enter “0000”.

**Notice: this system will support professional monitoring service which use the “ CONTACT ID” , the local number of the professional monitoring**

service must be enter as the first or second number only in the “Stored Phone Number”.

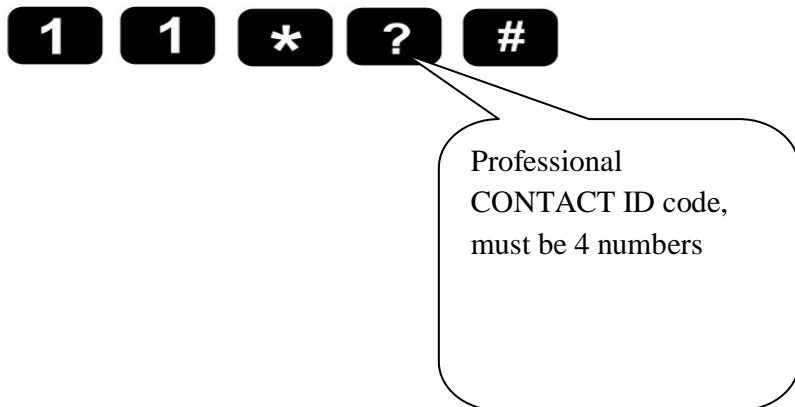

## 22. Exit Programming Status.

When you have completed programming the system's functions, push the button **Exit** on the keypad; after 30 second system will automatically exit “programming status”

## 23. Resetting Your System Functions.

Press “0000#” to reset your system to the factory default setting. The factory default password is “1234”

# STEP 3

## Operating the System

**Arming Function: all sensors active.**

**Home Arm Function: all sensors active except motion detectors.**

### 1. Keypad/Controller Operation.

- To **ARM** the alarm system: press the **away** button and hold for 3 seconds.
- To **HOME ARM** the alarm system: press **home** button and hold for 3 seconds.
- To **DISARM** the alarm system: press **password + disarm**
- For **emergency**: press the **panic** button.

## 2. Key Chain Remote Operation.

- To arm system; press the “**lock**” button
- To disarm system; press the “**unlock**” button.
- To home arm system: press the “**house**” button.
- For **emergency**; press the “**alarm**” button

## 3. Remote Operation by Phone.

Dial the phone number that is connected to your alarm system and after approximately 8 rings (the number of rings can be changed: see section 17 “[Remote Access to Keypad/Dialer](#)”), you will hear two Beeping sounds. That is the signal to enter the **password + #**. This will be followed by two beeping sounds. Follow the beeps by entering the number of the function you want to activate:

- To arm system: press number: “**1**”
- To disarm system: press number: “**2**”
- To monitor your home: press: “**\***”, this allows 30 seconds of listening time; press “**\***” for an additional 30 seconds.
- To exit: press “**#**”

## 4. What to do When the Alarm Auto-Dialer call you?

When you receive the recorded message from your alarm system you have three options:

- **Press “\*”** This allows you to monitor your premises for 30 seconds. You can press “\*” again for an additional 30 seconds.
- **Press “#”** This allows you to turn off the automatic calling system. If you do not turn off. The system will continue dialing all of your stored phone numbers.
- **Handing up phone.** System will proceed to dial the next stored numbers. While the system is dialing through the stored number you can not call in to your phone.

## 5. Wireless Portable Keypad Operation.

### ● **Activating Wireless Portable Keypad.**

With your system (wireless keypad/controller) in **programming status (see section 1)**, Press the follow button below on wireless **keypad/controller (not portable keypad)**

**7=>0=>\*=>0=>0=>#**

And then Press the follow button below on **wireless portable keypad**

**1=>2=>3=>4=>#=>1=>#**

Activation will be confirmed by a **double beeping** sound

- Change Portable Keypad **PASSWORD**. Press the follow button below on wireless portable keypad.

**Password (factory password is 1234) =>#=>new password (must 4 digits) =>#**

- To **ARM** the alarm system: Press the follow button below on wireless portable keypad.

**Password (factory password is 1234) =>#=>1=>#**

- To **HOME ARM** the alarm system: Press the follow button below on wireless portable keypad.

**Password (factory password is 1234) =>#=>2=>#**

- To **DISARM** the alarm system: Press the follow button below on wireless portable keypad.

**Password (factory password is 1234) =>#=>3=>#**

- For **Emergency**: Press the follow button below on wireless portable keypad.

**Password (factory password is 1234) =>#=>\***

- **Resetting Wireless Portable Keypad**. Press the follow button below on wireless portable keypad.

**0=>0=>0=>0=>#**